


CANDELON 10 FILTER UNIT

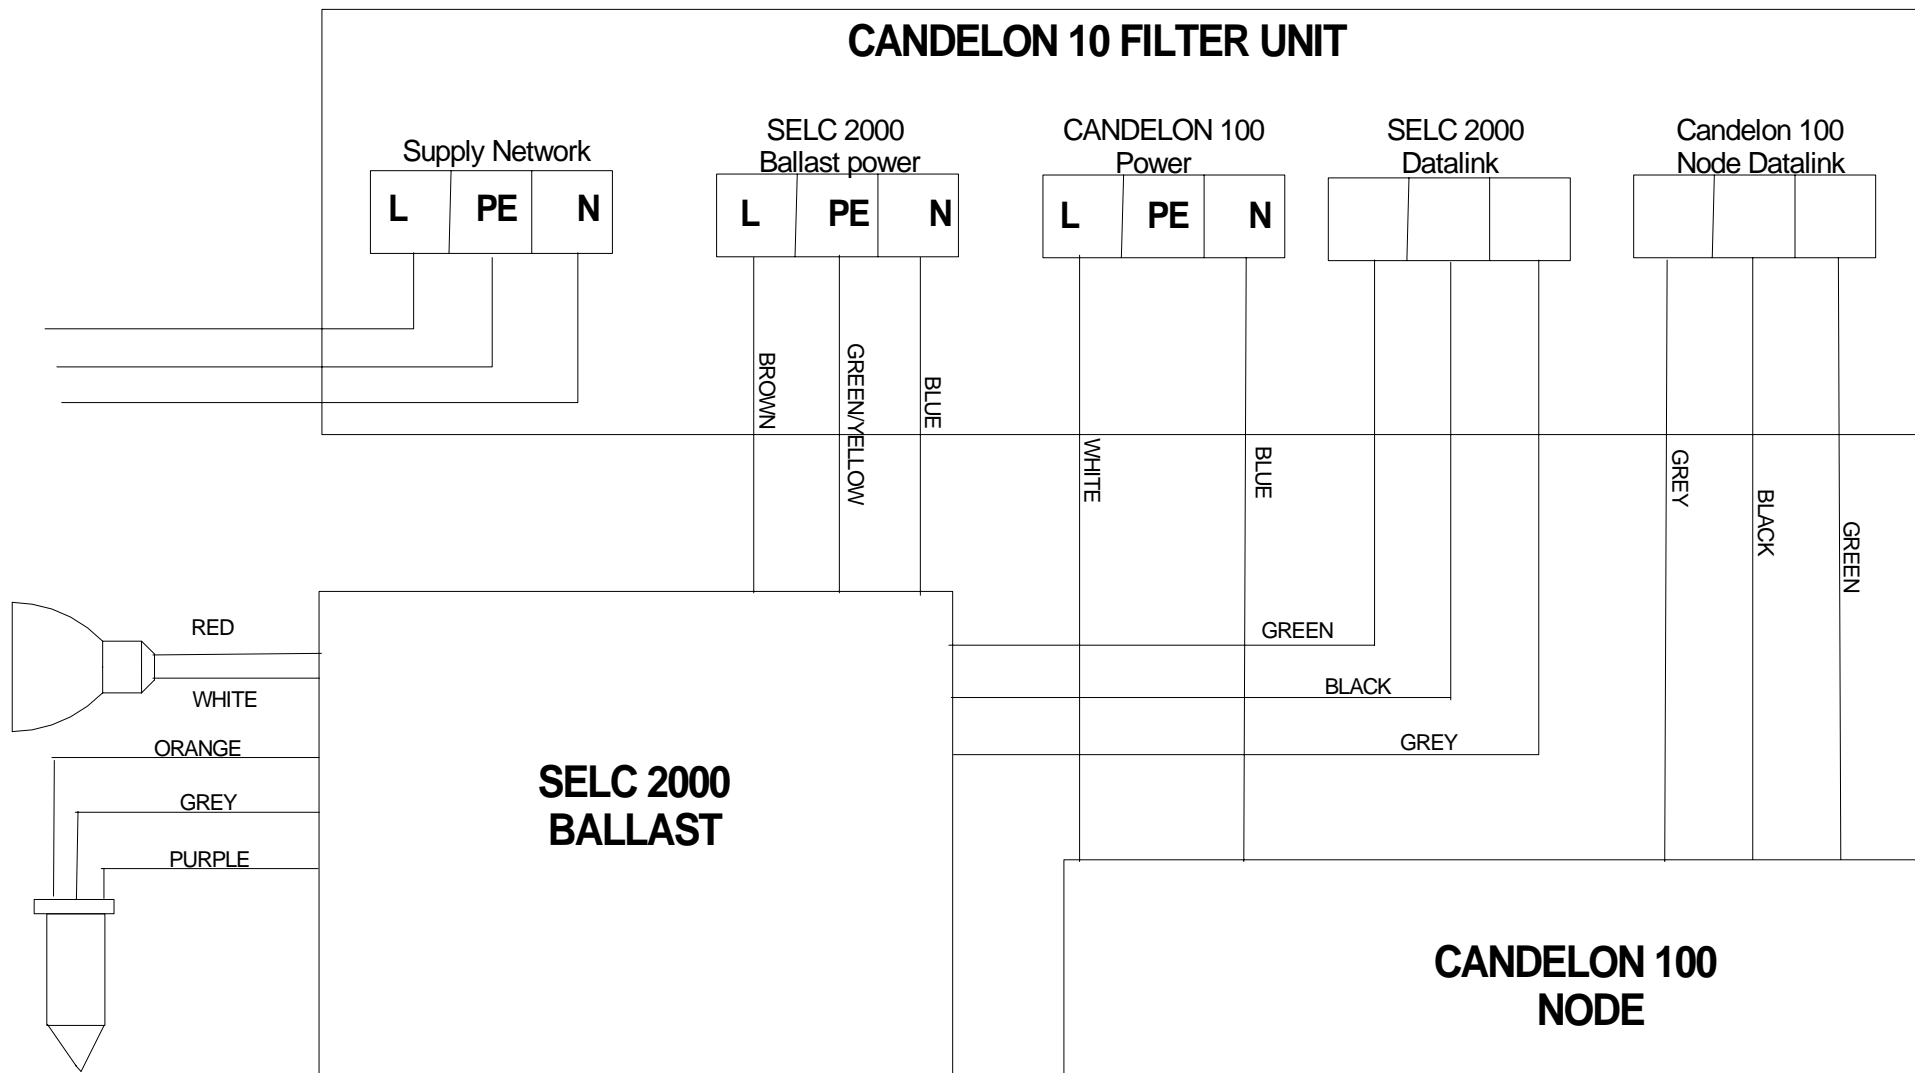

Connect up the lamp, photocell and mains wires as shown on the accompanying wiring diagram. It is important to observe the following clearances.

- i) Keep the lamp red wire bare-end (ignition pulse conductor) at least 9mm away from all Earthed metal and all other bared wires.
- ii) Maintain at least 4mm clearance between the live and neutral bare-ends.
- iii) Keep the mains leads at least 10mm away from all other leads.
- iv) Keep the lamp lead bare-ends 8mm apart and 9mm from earthed metal.

NOTE: The clearance distance refers to the total conduction path length.

SELC IRELAND LTD.		Belmullet, Co. Mayo Ireland.	
Title Wiring diagram for Ballast, Node and Filter		Date 02-02-04	
Revision N/A		Revision Notes wiring.CAD	
Drawn By John Conway	Date 02-02-2004	Checked by	Date
Scale N/A	Sheet 1 of 1		